

## Changing The Ring Types for The SBX-IP 320

Use this feature to set different ring types for your incoming intercom calls and external (CO) calls. This allows you to instantly know if you are receiving an intercom call or a call from an outside source.

1. Use ▲ on the Nav Button to access the Programming Menu.
2. Press the OK soft button to select the BASIC PROGRAM option.
3. Use the ▼ ▲ on the Nav button to scroll through the options.

1. BASIC PROGRAM  
2. ADVANCED PROGRAM  
OK



When you see the Ring Program option:

4. Press the OK soft button to select the Ring Program option.

1. STATION NAME PROGRAM  
**2. RING PROGRAM**  
BACK OK



5. Use the ▼ ▲ on the Nav button to toggle between the ICM (Intercom) and CO (outside call) options.

1. ICM RING  
2. CO RING  
BACK OK



6. Press the NEXT soft button to scroll through the various ring types.  
- As you scroll, the ring types will sound.

RING TYPE : 01 (01-15)  
SELECT BY [NEXT]  
BACK NEXT OK



When you hear the ring type you want to use for the currently selected call type (ICM or CO):

7. Press the OK soft button to save the setting.

If you have any questions please feel free to call us @ 303-688-6191