

Vodavi STSe, XTS-IP and XTSc-IP

Call Forwarding - (follow me) your phone to another station

- Lift Handset or Press on/ off button
- Dial the follow me forwarding code (642) on the key pad
- Dial Station Number of the Station you are at.
- Dial the appropriate forwarding code

6 = all calls

7 = no answer

8 = busy

9 = busy/ no answer

* = off-net

- Dial the 3 or 4 digit destination number (Station, Voice Mail, ACD/ UCD, Hunt Group, or Speed Bin for Off-Net)
- Replace Handset or Press the On/ Off Button

To Remove Call Forwarding

- Lift Handset or Press on/ off button
- Dial Forward Me Forward code (642) on the phone
- Dial the station number of the station that forwarding is to be cancelled
- Dial 6
- Redial the same station number - You should hear a confirmation tone and FWD light will go out.

Example: When you were in a non-forwarding mode – you forwarded ext. 100 to ext. 108 - you are now returning all calls back to ext. 100.

- *On/off 642 100 6 100*

If you have any questions please feel free to call us @ 303-688-6191.