

Programming Distinctive Ringing for the XTS and STSe

Distinctive Ringing for a Station

- At the phone you would like to change the ring on. With the handset in the cradle
- Press **695**
- **Your Ring Tones are 00-36**
- **Enter the ring that you wish to hear 00-36.**
- **When you hear the tone press “Speed” to save that tone your station.**

If you have any questions please feel free to call us @ 303-688-6191