

Programming Flexible Buttons on the Vodavi STSe, XTS-IP and XTSc-IP

1. Press the **SPEED** button twice (x2)
2. Press the button you would like to program
 - *NOTE: The button you press needs to be programmed as a flex button in programming.
3. Dial the desired code (*see below*) – you will hear a confirmation code after dialing a code.

Function	Code	Function	Code
Call Coverage – Non Ringing	647 + Station Number	Station Numbers	3 Digits: 100-195
Call Coverage – Ringing	646 + Station Number		4 Digits: x100-x195 x = the side code 1, 2, 3, etc.
Call Park Personal	438		
Caller ID Name/Number	653		
Do not Disturb	631		
Last Number Redial	Speed + #		
Page – All Call	700	Voice Button One Touch Record	649 + Voice Mail Group 440 or 441
Ring Tone	695 + Ring Code (00-36)		
UCD Group	550-565	Speed Dial Numbers	Speed + Bin Location (9000-19)
Universal Day/Night Answer	#5		
Clear Call Forwarding & DND	662	Background Music	3 Channels (632 + 0/1/2/3)
Personal Messaging	662		
Answering Machine Ring	654		
Headset Mode	634		
Caller ID Display – Answered	659		
Caller ID Display – Unanswered	635		
HTP (8 Button phone)	667		
Name in Display	690		
Repeat Redial	643		
Voicemail Pause/Resume Record	655		
Night Service	604		
Conference (8 button phone)	624		
Answering Machine Speaker	654 + 1		

To Clear a Flex Button:

1. Press SPEED Button Twice
2. Press the button you would like to clear
3. Press Flash Key
(You will hear a confirmation code)

If you have any questions, please feel free to call us @ 303.688.6191